

**Autonics**

**ROTARY ENCODER  
(INCREMENTAL MANUAL HANDLE TYPE)  
ENH SERIES**

**INSTRUCTION MANUAL**



Thank you for choosing our Autonics product.  
Please read the following safety considerations before use.

**■ Safety Considerations**

※ Please observe all safety considerations for safe and proper product operation to avoid hazards.

※ ⚠ symbol represents caution due to special circumstances in which hazards may occur.

**⚠ Warning** Failure to follow these instructions may result in serious injury or death.

**⚠ Caution** Failure to follow these instructions may result in personal injury or product damage.

**⚠ Warning**

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)  
Failure to follow this instruction may result in fire, personal injury, or economic loss.
- Install on a device panel to use.**  
Failure to follow this instruction may result in fire.
- Do not connect, repair, or inspect the unit while connected to a power source.**  
Failure to follow this instruction may result in fire.
- Check 'Connections' before wiring.**  
Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.**  
Failure to follow this instruction may result in fire.

**⚠ Caution**


- Use the unit within the rated specifications.**  
Failure to follow this instruction may result in fire or product damage.
- Do not short the load.**  
Failure to follow this instruction may result in product damage by fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**  
Failure to follow this instruction may result in fire or explosion.
- Do not use the unit near the place where there is the equipment which generates strong magnetic force or high frequency noise and strong alkaline, strong acidic exists.**  
Failure to follow this instruction may result in product damage.

**■ Ordering Information**

<b>ENH</b>	<b>100</b>	<b>1</b>	<b>T</b>	<b>24</b>
Series	Pulses/revolution	Clickstopper position	Control output	Power supply
Handle type	25, 100	1: Normal "H" 2: Normal "L"	T: Totem pole output V: Voltage output L: Line driver output	5: 5VDC ±5% 24: 12-24VDC ±5%

※The power of Line driver is only for 5VDC.

**■ Dimensions**

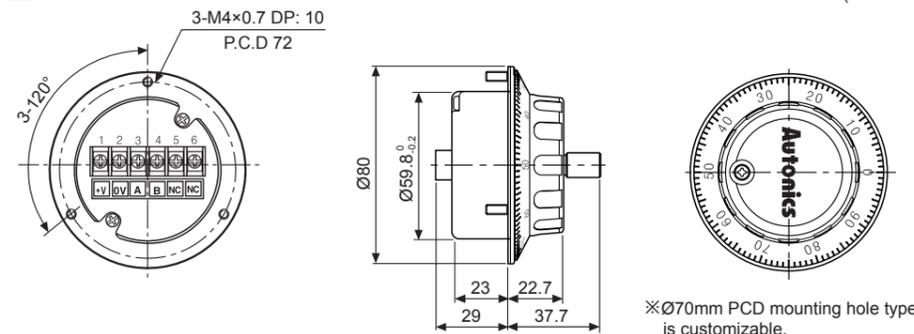

※ Fix the unit by a wrench under 0.15 N-m of torque.

※ The above specifications are subject to change and some models may be discontinued without notice.  
※ Be sure to follow cautions written in the instruction manual, and the technical descriptions (catalog, homepage).

**■ Specifications**

Item	Manual Handle Type Incremental Rotary Encoder	
Model	Totem pole output	ENH-□-1-T-□, ENH-□-2-T-□
	Voltage output	ENH-□-1-V-□, ENH-□-2-V-□
	Line driver output	ENH-□-1-L-□, ENH-□-2-L-□
Resolution (PPR)*1	25, 100	
Output phase	A, B phase (line driver output A, $\bar{A}$ , B, $\bar{B}$ phase)	
Phase difference of output	Phase difference between A and B: $\frac{T}{4} \pm \frac{T}{8}$ (T= 1 cycle of A phase)	
Control output	Totem pole output	• [Low] - Load current: max. 30mA, Residual voltage: max. 0.4VDC= • [High] - Load current: max. 10mA Output voltage (power voltage 5VDC= $\pm$ ): min. (power voltage-2.0)VDC= $\pm$ , Output voltage (power voltage 12-24VDC= $\pm$ ): min. (power voltage-3.0) VDC= $\pm$
	Voltage output	Load current: max. 10mA, Residual voltage: max. 0.4VDC= $\pm$
	Line driver output	• [Low] - Load current: max. 20mA, Residual voltage: max. 0.5VDC= $\pm$ • [High] - Load current: max. -20mA, Output voltage: min. 2.5VDC= $\pm$
Electrical specification	Totem pole output	Max. 1μs (cable length: 1m, I sink = 20mA)
	Voltage output	
	Line driver output	Max. 0.2μs (cable length: 1m, I sink = 20mA)
Power supply	Totem pole output	• 5VDC= $\pm$ 5% (ripple P-P: max.5%) • 12-24VDC= $\pm$ 5% (ripple P-P: max.5%)
	Voltage output	
	Line driver output	5VDC= $\pm$ 5% (ripple P-P: max.5%)
Current consumption	Max. 40mA (disconnection of the load), Line driver output: max. 50mA (disconnection of the load)	
Max. response frequency	10kHz	
Insulation resistance	Over 100MΩ (at 500VDC megger between all terminals and case)	
Dielectric strength	750VAC 50/60Hz for 1 minute (between all terminals and case)	
Connection	Terminal block type	
Mechanical specification	Starting torque	Max. 1kgf-cm (0.098N-m)
	Shaft loading	Radial: max. 2kgf, Thrust: max. 1kgf
	Max. allowable revolution*2	Max. 200rpm (normal), 600rpm (peak)
Vibration	1.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours	
Shock	Approx. max. 50G	
Environment	Ambient temperature	-10 to 70°C, storage: -25 to 85°C
	Ambient humidity	35 to 85%RH, storage: 35 to 90°C
Protection structure	IP50 (IEC standard)	
Approval	CE (except for line driver output)	
Weight*3	Approx. 330g (approx. 260g)	

※1: Not indicated resolutions are customizable.


※2: Make sure that max. response revolution should be lower than or equal to max. allowable revolution when selecting the resolution.

$$[\text{Max. response revolution (rpm)}] = \frac{\text{Max. response frequency}}{\text{Resolution}} \times 60 \text{ sec}$$

※3: The weight includes packaging. The weight in parenthesis is for unit only.

※ Environment resistance is rated at no freezing or condensation.

**■ Control Output Diagram**

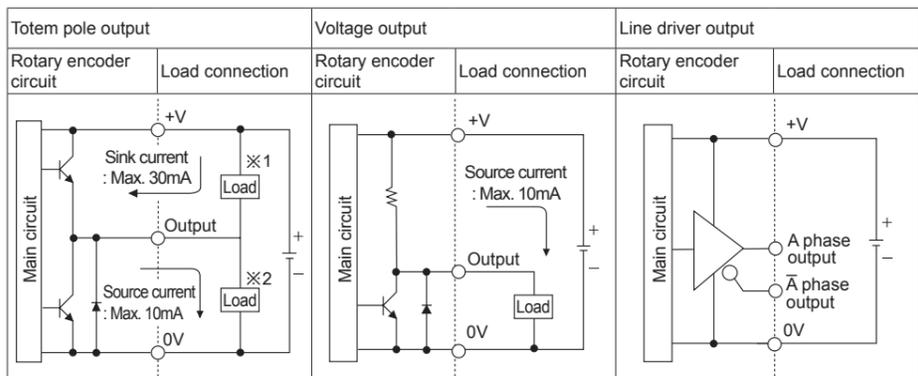



※ The output circuits for A, B phase (line driver output is A,  $\bar{A}$ , B,  $\bar{B}$  phase) are same.

※ Totem pole output can be used for NPN open collector type (※1) or voltage output type (※2).

**■ Connections**


• Totem pole output / Voltage output

• Line driver output

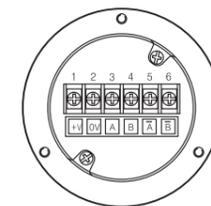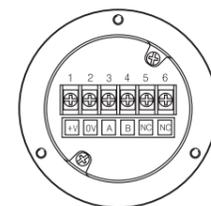

※ Do not use terminal No. 5, 6.

**■ Output Waveform**

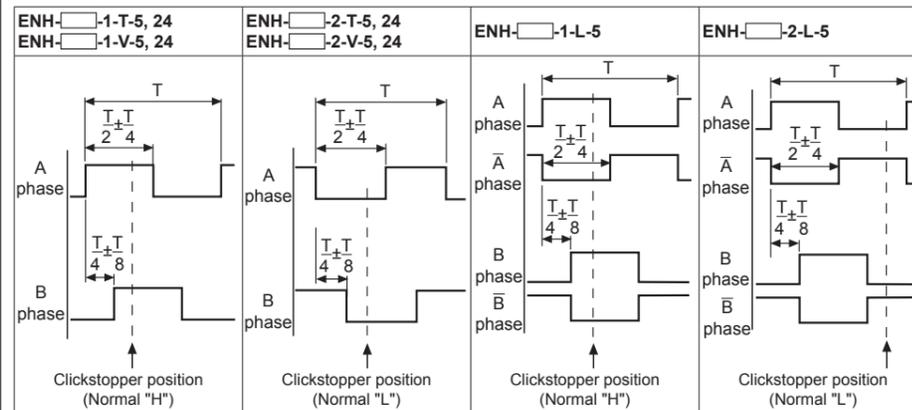

※ Clickstopper position Normal "H" or Normal "L": It shows the waveform when the handle is stopped.



**■ Cautions during Use**

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- 5VDC, 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- For using the unit with the equipment which generates noise (switching regulator, inverter, servo motor, etc.), ground the shield wire to the F.G. terminal.
- Ground the shield wire to the F.G. terminal.
- When using switching mode power supply, frame ground (F.G.) terminal of power supply should be grounded.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive noise.
- For Line driver unit, use the twisted pair wire which is attached seal and use the receiver for RS-422A communication.
- Check the wire type and response frequency when extending wire because of distortion of waveform or residual voltage increment etc by line resistance or capacity between lines.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in 'Specifications')
  - Altitude max. 2,000m
  - Pollution degree 2
  - Installation category II

**■ Major Products**

- Photoelectric Sensors
- Fiber Optic Sensors
- Door Sensors
- Door Side Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connector/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, CO<sub>2</sub>, Nd: YAG)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSRs/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometer/Pulse (Rate) Meters
- Display Units
- Sensor Controllers

**Autonics Corporation**  
http://www.autonics.com

**HEADQUARTERS:**  
18, Bansong-ro 513 beon-gil, Haeundae-gu, Busan, South Korea, 48002  
TEL: 82-51-519-3232  
E-mail: sales@autonics.com